
128g铜版纸 折后尺寸:105*140mm 双面单色印刷 风琴折

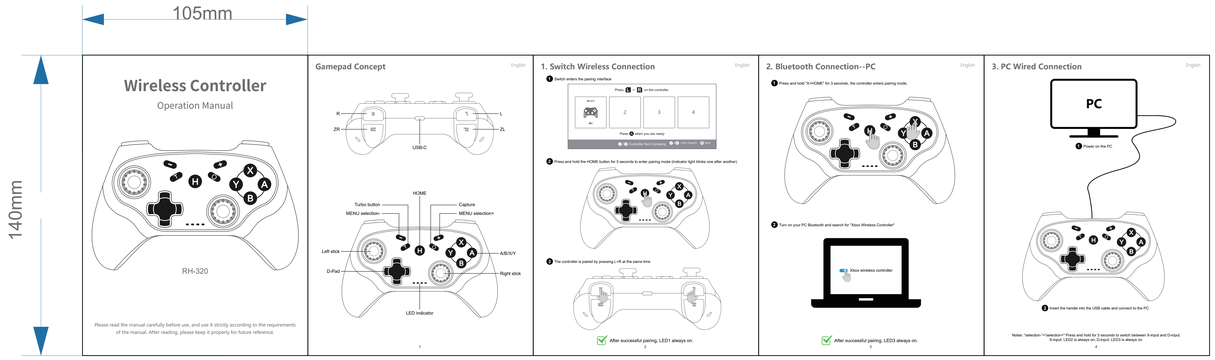

Wireless Controller

Operation Manual

RH-320

Please read the manual carefully before use, and use it strictly according to the requirements of the manual. After reading, please keep it properly for future reference.

Gamepad Concept

English

1

1. Switch Wireless Connection

English

❶ Switch enters the pairing interface

❷ Press and hold the HOME button for 3 seconds to enter pairing mode (indicator light blinks one after another)

❸ The controller is paired by pressing L+R at the same time

After successful pairing, LED1 always on.

2

2. Bluetooth Connection--PC

English

❶ Press and hold "X+HOME" for 3 seconds, the controller enters pairing mode.

❷ Turn on your PC Bluetooth and search for "Xbox Wireless Controller"

After successful pairing, LED3 always on.

3

3. PC Wired Connection

English

❶ Power on the PC

❷ Insert the handle into the USB cable and connect to the PC

Notes: "selection-"+"selection+" Press and hold for 2 seconds to switch between X-input and D-input.
X-input: LED1 is always on; D-input: LED3 is always on.

4

4. Bluetooth connection--iOS

English

❶ Press and hold the L+HOME button for 3 second,the controller Enter pairing mode.





❷ Turn on iOS Bluetooth, search for"DUALSHOCK 4 Wireless Controller"

❸ Press the HOME button in standby mode to connect back.



After successful pairing, LED1 and LED3 are always on.

5

5.Bluetooth connection--Android

English

❶ Press and hold the B+HOME button for 3 second,the controller Enter pairing mode.





❷ Turn on Android Bluetooth, search for"Gamepad"

❸ Press the HOME button in standby mode to connect back.



After successful pairing, LED1 always on.

6

6.TURBO Function

English

❶ Long press any function key (A, B, X, Y, L, R, ZL, ZR)



❷ Press and hold the Turbo button and the button that needs to be set to the TURBO function to achieve manual burst (may)Repeating the operation will switch to automatic bursting.Repeat the operation again to cancel the turbo function.



❸ The key combination Turbo+selection- realizes the turbo function of clearing all keys.



❹ Speed 3 gears: 1st gear 5 Shocks, 2nd gear 15 Shocks, 3rd gear 25 Shocks. Each time a gear is successfully set, the operating motor vibrates once, indicating that the setting is successful.
Turbo Gear Adjustment: Turbo key+Right Stick (up or down)

7

7. Handle Vibration Function Settings

English

❶ The vibration intensity can be adjusted, with a total of 4 levels: 100%, 70%, 30%, and 0%. Default vibration level: 70%.



❷ Adjust motor strength:Enhance or dampen vibration: Turbo key+Left Stick (up or down).



8

⚠ Caution

English

•Do not store this product in a damp or hot place.
•Do not knock, drop, bat, puncture, or attempt to disassemble the product to avoid unnecessary damage to the product.
•Do not knock, drop, hit, puncture, or attempt to disassemble the product to avoid unnecessary damage to the product.
•This product has a built-in battery, do not drop the handle into a fire and do not dispose of it with garbage.
•Avoid getting water or other liquids inside the handle, which may affect the function of the handle.
•Do not charge the handle near fire or other heat sources.
•Do not place heavy objects on this product.
•Do not touch the ports with your hands or put foreign objects inside the ports.
•Do not disassemble this product by non-professionals, or it will not be included in the after-sales warranty service.
•Children should use this product under adult supervision.

✻ Troubleshooting

Why is the controller not recognized on smart Android TV?
1. Confirm whether the smart Android TV USB interface is working properly
2. The power supply of the smart Android TV is insufficient, resulting in unstable USB voltage
3. Try to unplug the smart Android TV USB port and try another USB port
√ Why can't the controller be used in the game?
1. The game itself does not support controller peripherals
2. You need to set the Gamepad in the game before you can use it
√ Why can't the Gamepad vibrate?
1. The game itself does not support vibration
2. The vibration function is not turned on in the game settings
√ Other:
1. When it cannot be turned on, the built-in battery may be dead. Please use the USB cable to charge the Gamepad before turning it on.
2. When the Gamepad crashes or drops unexpectedly, please keep the distance from the device not too far, or reconnect

9

Warranty Car

English

Product number:	Purchase date:
Dealer:	Username:
Contact numbr:	E-mail:
User address:	

Warranty record

Username	Fault description	Maintenance date	Signature

Certificate

Inspector

Made in china

10