
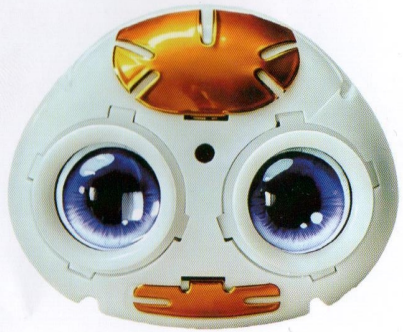


User Manual

Please read this user manual carefully before using the product, and keep it properly for future reference.
(Content marked in red is important and requires careful reading.)

POWER & NETWORK SETUP

SUPER BALL

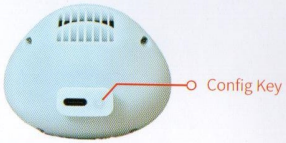

Power on: Long press the Power/Pairing Button on the rear of the device for 3 seconds. Illumination from the button indicates successful startup.

Power off: Long press the rear Power/Pairing Button for 3 seconds. The button' s light going out signifies the device has powered off.

Network config: Single-tap the rear Power/Pairing Button three times in quick succession to enter network pairing mode.

Mute & Unmute: When the device is powered on, tap the Power/Network Configuration key on the rear to mute the device; tap it again to unmute.

APP DOWNLOAD & USAGE

1.Scan the QR code, or search "Tuya" in your mobile app store to download the application. Existing users need to update the app to the latest version.

2.Enable WiFi on your phone and connect to a 2.4GHz WiFi (not supported for 5GHz-only or mixed 2.4G/5G networks with the same name).

3.Power on the device for network setup. Confirm the TuYa App is installed, then log in or register.

4.Open the "TuYa" App and tap the "+" icon in the top-right corner of the homepage.




5.Select "Add Device" and choose your product as prompted.



6.Connect to the same network as your mobile phone. If using a 4G cellular connection, disconnect Wi-Fi first, then return to the Add Device page to connect the device directly.




7.Addition succeeded, network configuration completed. The device is available for dialogue function after successful configuration.
(The 4G version cannot complete mobile network configuration when the battery is low.)

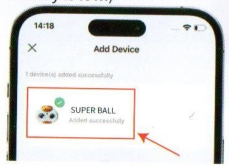


APP Usage & Device Updates

Role Switching & Basic Features


1.Open the App and tap an online device to enter edit mode.

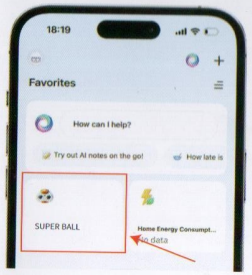

2.On the edit page, adjust volume, check battery, view chat history, switch roles, etc.

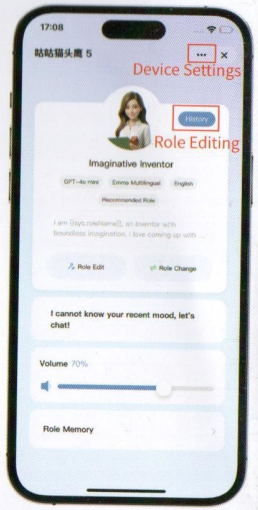


3.On the edit page, tap Switch Role. Create a custom role and save it. The device will switch to this new role.

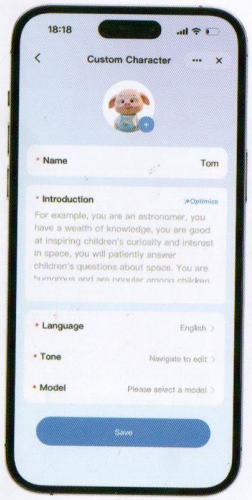


Note: (Both default and custom roles have memory and learning capabilities, and can create shared memories with users.)

4.In the Role Switching menu, you can select a pre-set system role to change the device's role.

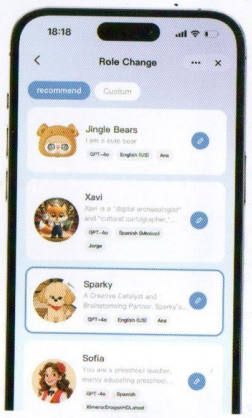


4G & Wi-Fi Signal Strengthening

1.After the device connects to the network, tap the settings menu icon in the top-right corner of the device editing page, then scroll down to the bottom to access network settings.

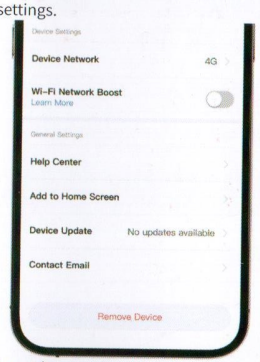

Note: When connected to a 4G network, re-provision the device if you need to switch to a Wi-Fi connection.

2.Tap Network Settings to enter the subpage, then add a backup network.

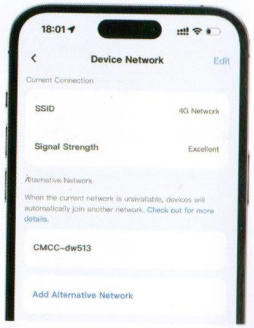


3.After successful addition, return to the Network Settings page and enable Wi-Fi Network Enhancement.




Device Firmware Update


1.With the device online, go to the device edit page. Tap the top-right settings menu, scroll down, and tap Device Update.

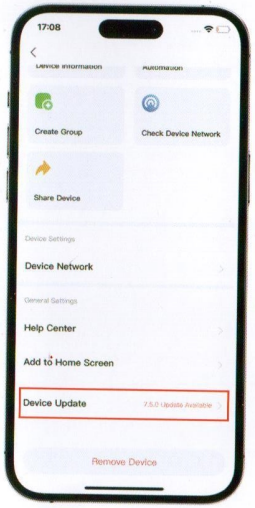

2.If an update is available, confirm the version and update details, then tap Update.

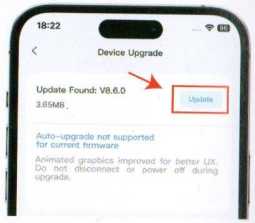

3.The update takes 3–10 minutes. Once finished, it will show "You're on the latest version."

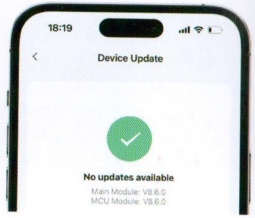

Component & Conversation Modes

Component Functions

Button & Chat:

1. Free Chat Mode

·Once the device is connected to the network, free chat is enabled. You can interrupt the conversation at any time to start a new topic.

·Tap the rear button to mute instantly; tap again, shake or pet the device to resume chatting.

2. Precautions

·Touching is disabled during recording and chatting.

·The device enters sleep mode after 3 minute of inactivity; wake it by shaking or touching the unit.

·The screen shuts off after 6 minutes with no operation; single-tap the rear key to wake the device.

Petting Function: The touch function automatically activates once the device powers on. When your hand gets within 1 cm of the copper foil strip, the indicator light turns on, the touch takes effect, and the device plays a preset random audio clip.

Top Copper Foil Strip: When approaching the top copper foil strip, the device plays cheerful humming sounds alongside a happy animated GIF.

Bottom Copper Foil Strip: When approaching the bottom copper foil strip, the device outputs annoyed or peculiar humming sounds, paired with matching angry/odd animated GIFs and vibration feedback.

Note: The stroking function is disabled. during conversation.



Voice Command Control

In conversation mode, issue the corresponding voice commands to the device to complete quick adjustments. The adjustment command will take effect with your next utterance after the device receives it.

Function	Command Examples
Volume Adjustment	"Your voice is too loud / too soft." "Set the volume to 80%."
Check Battery/Volume	"What's the current volume?" "What's the current battery level?"
Switch Voice/Role	"Switch to the XX role."
Check Battery/Volume	"Can we talk in English?"
Adjust Speech Speed	"Set speech speed to 50." "Set speech speed to 80."
End Conversation	"Shut up.", "Stop talking." "I don't want to chat anymore."
Screen Control	"Turn off/on the screen." "Open/close your eyes."
Play Story/Song	"Tell me a story.", "Play a song."
Pause Playback	"Pause playback.", "Stop playback."
Emotion Trigger	"I'm so sad today.", "I'm angry." "I'm very happy."

Charging & Storage

Package Contents

·1 x Device
·1 x User Manual
·1 x Type-C Data Cable

Charging Requirements

1.Connect the charging cable to the device's charging port. Use a certified charger (rated 5V 1A and CCC certified) to charge the device (charger sold separately).

2.A full charge takes approximately 6 hours (may vary slightly due to various factors).

3.During charging, the indicator light next to the Type-C port turns red to indicate charging in progress, and the red light turns off when fully charged.

4.Do not charge continuously for more than 8 hours. Ensure supervision during charging; disconnect before leaving unattended for extended periods.

Storage Precautions

Do not use, store, or charge the device in direct sunlight, near heat sources, or in high-temperature environments. For daily use, keep the device in a cool, dry place.

Safety & Cleaning

Safety Precautions

1.This product contains a built-in lithium battery. Operate the device only within the temperature range of 0°C to 40°C. Do not place it in extremely high-temperature environments. Keep it away from fire sources and other heat generators. Do not expose it to open flames. Avoid impact, shock, squeezing, or puncturing. Do not disassemble, repair, or modify the device by yourself. Do not place the battery in an extremely low-pressure environment, as this may cause the battery to explode or leak flammable liquids and gases.

2.Do not charge the device using a charger in wet locations (e.g., near sinks, bathtubs, or showers).

3.Adult supervision and guidance are required when children use the device. Before use, inspect the device for intact appearance, proper

installation, and normal operation. If any issues are found, contact customer service.

4.Dispose of packaging properly to prevent suffocation hazards for infants and toddlers. Do not use the device if it or its accessories are damaged or broken. Do not clean the device while it is powered on or charging.

5.Inspect the device regularly. If any abnormality is detected in the charging process or cable, stop using it immediately to avoid risks of electric leakage, short circuit, or fire.

Cleaning Method

1.This product is not waterproof. Do not wash or submerge it in water.

2.Do not use harsh cleaners containing salt water, hot water, bleach, strong acids, or strong alkalis.

3.Power off the device before cleaning. Wipe the surface gently with a soft cloth dampened with tap water and wrung dry. After cleaning, press out excess moisture with a dry paper towel and let it air dry completely. Do not allow liquids to enter ports or gaps.

4.For stubborn stains, contact official customer service for additional cleaning guidelines.

Product Information

Product Name	SUPER BALL
Product Model	SUPER BALL
Product Material	Electronic components, plastic movement
Battery Capacity	1000mAh (4G 1200mAh)
Charging Input	5V-1A
Battery Voltage	3.7V
Maximum Power	5W
Battery Type	Lithium battery
Place of Origin	China
Applicable Standard	