REMOTE CONTROL AIRCRAFT CARRIER

WARSHIP SERIES



PARTS LIST:


x1


x1


x1

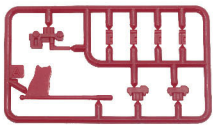

x1

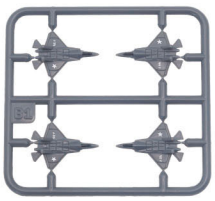

x1

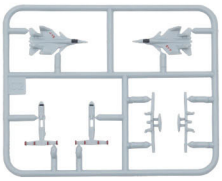

x1

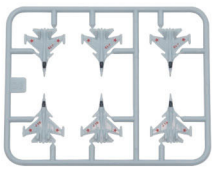

x4

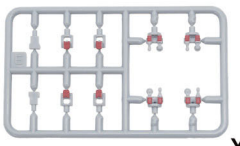

x3

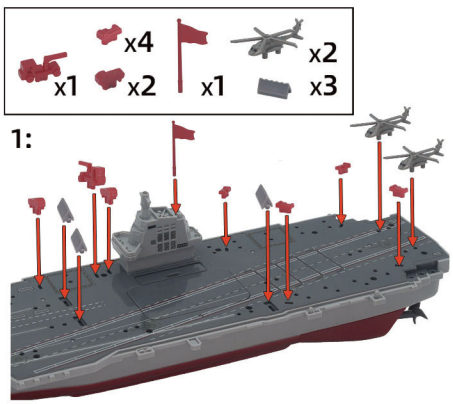

x1

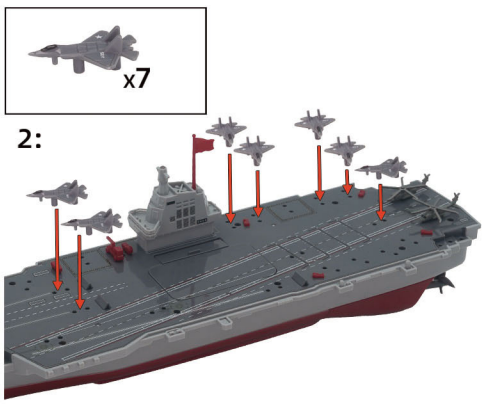

x2

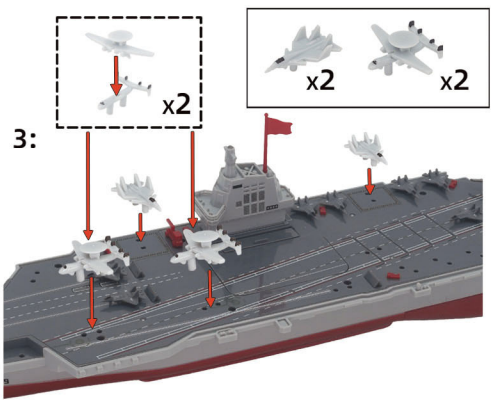

x2

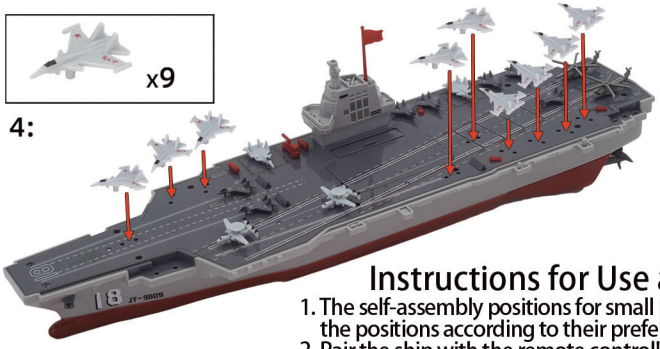

x2

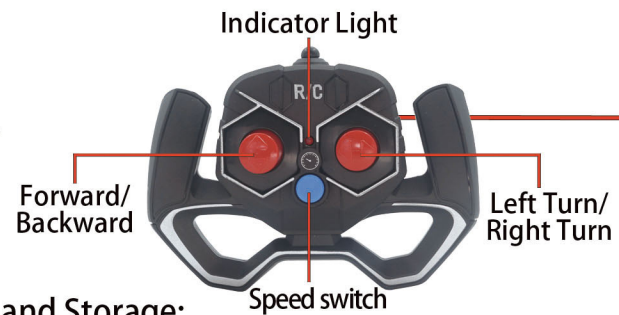

x1












Two 1.5V "AA" Batteries (need to be purchased separately)

Instructions for Use and Storage:

1. The self-assembly positions for small plane and car are for reference only. Players can adjust the positions according to their preferences. (Please keep the remaining parts for spare use.)
2. Pair the ship with the remote control! After installing the battery and pressing down the drain cover tightly, place the ship on the water (the indicator light will flash). Install the batteries in the remote. At this time, the ship's light will be constantly on, and the remote's light will be off (paired successfully).
3. The remote control must not come into contact with water. If it accidentally gets wet, please wipe it dry immediately!
4. After use, if you findwater inside the ship, please open the drain outlet to drain it out. Remove the batteries from both the ship and the remote, and use a soft and clean cloth to wipe off any dirt on the surface of the ship.



