
G8说明书 单页尺寸60*90mm

G8无线控制器说明书

功能按键示意图：



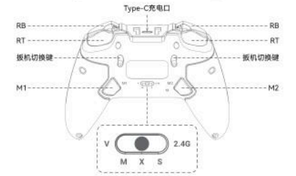

V3模式 | MFi模式 | X-input模式 | Switch模式 | 2.4G模式

适用说明：

1. 本产品采用人体工学设计，手感舒适。
2. 采用蓝牙 5.3 EDR/BLE 连接，手柄通过蓝牙与手机等各主机连接。
3. 支持 ShootingPlus APP，APP 可以通过各手机应用市场下载。
4. 支持安卓与鸿蒙 HID 标准模式，可玩支持 HID 标准模式的各类游戏厅游戏。
5. 支持安卓 6.0 以上系统（即 ShootingPlus 安卓模式）。
6. 支持 iOS 13.0 以上系统 MFi 游戏，MFi 游戏可以到 ShanWan MFi app 下载。
7. 支持安卓/苹果/鸿蒙手机玩X-input游戏。
8. 具有六轴体感功能，支持体感强开

★ 因手机系统问题，个别手机可能不支持此设备


★ 因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作，我公司不负任何责任。对此我公司保留最终解释权。

产品特性参数：

1、工作电压：DC3.7V
2、工作电流：约 10mA
3、持续使用时间：>20H
4、休眠电流：<5uA
5、充电电压/电流：DC5V/500mA
6、蓝牙传输距离：<=8M
7、电池容量：1000mAh
8、待机时间：满电放置 60 天

产品使用说明：

X-input模式：



1、模式键拨动至"X"档位，长按"HOME键"开机，指示灯【青色】快闪。
2、使用设备我到添加蓝牙设备，点击搜索，找到"Xbox Wireless Controller"设备名时，选择连接，连接成功后，手柄指示灯常亮【青色】。
3、再次连接时，短按"HOME键"，即可自动连接。

* 此模式适合安卓/iOS/鸿蒙/Xbox主机系列和PC主机的串流以及手机原生态的游戏

2.4G模式：





电脑接收器【插电脑】
【选配】

1、模式键拨动至"2.4G"档位，长按"HOME键"开机，指示灯【青色】快闪。
2、接收器插设备上，连接成功后，手柄指示灯常亮【青色】。
3、再次连接时，短按"HOME键"，即可自动连接。

* 此模式适合PC和安卓系统设备

Switch模式：



1、模式键拨动至"S"档位，长按"HOME键"开机，指示灯【绿色】快闪。
2、在 SWITCH 主机，选择 手柄 Controllers->更改握把/顺序 ChangeGrip order，进入到 SWITCH 主机配对模式界面 Press L+R on the controller，进入Switch模式配对，连接成功后，手柄指示灯常亮【绿色】。
3、再次连接时，短按"HOME键"，即可自动连接。

* 此模式适用于Switch主机。

MFi模式：




1、模式键拨动至"M"档位，长按"HOME键"开机，指示灯【紫色】快闪。
2、当设备搜索到"DUALSHOCK 4 Wireless Controller"设备名时，选择连接。连接成功后，手柄指示灯常亮【紫色】。
3、再次连接时，短按"HOME键"，即可自动连接。

* 此模式适合玩苹果/安卓/鸿蒙原生游戏，以及PS4/PS5串流游戏

P4连接：

1、模式键拨动至"M"档位，将USB数据线插上PS4的USB接口，另一端的Type-C接口插上G8有线连接接口。
2、长按"HOME键"开机，指示灯【蓝色】快闪。
3、连接成功后，手柄指示灯常亮【蓝色】，常亮后把数据线拔了即可无线操作。
4、再次连接PS4时，短按"HOME键"，即可自动连接。

V3模式：



1、模式键拨动至"V"档位，长按"HOME键"开机，指示灯【红色】快闪。
2、打开手机蓝牙，找到蓝牙名称"G8"，选择连接，连接成功后，手柄指示灯常亮【红色】。
3、再次连接时，短按"HOME键"，即可自动连接。

* 此模式仅支持安卓、鸿蒙系统对王者，吃鸡等需要映射的游戏！
* 当手柄拔到在V3位置时亮按住X不放再按HOME开机，为HID模式，并且每次都要按此方式连接。

安卓/鸿蒙 按键映射功能：

关注公众号"ShootingPlus"，查看公众号内的默认操作说明，如需设置映射键位，请下载安装"ShootingPlusV3"APP，在APP内进行按键映射以及调整按键位。
ShootingPlusV3 App，安卓与鸿蒙系统可以到各手机应用市场下载。



有线模式：

1、支持安卓HID、Switch 、MFi、Xinput 有线连接
2、使用方法为接到所需使用的模式，再用有传输数据功能的线连接上设备与手柄即可！

TURBO设置：



按下"A"再按"T"，则为"A"键Turbo连发
第二次按下"A"再按"T"，则为"A"键自动连发
第三次按下"A"再按"T"，则为"A"键关闭连发(恢复原状)

当"A"键在AUTO自动连发的情况下，按住"TURBO+左摇杆上下"设置自动连发的速度，分别为一秒15下、一秒25下、一秒8下。（注：其他功能键设置方法同上）

轴校准功能：



手柄平放至桌面，同时按住
【 START+HOME 】键，等待指示灯常亮后松手，校准完成后指示灯灭。

体感强开：



1、按住"T"键八秒不放，马达震动，则切换模拟右摇杆。
2、在六轴已切换成右摇杆的时候，轻按一下"T"，则进入宏键仪半开状态，主要使用场景为辅助FPS游戏时按下L2开镜时的射击瞄准。
3、再次按住"T"键八秒不放，马达震动，则切换模拟左摇杆。
4、再次按住"T"键八秒不放，马达震动，则取消。

宏编程：





【背部宏扩展设置】

①按住手柄的"SELECT"不放，再按"M1"，1秒后指示灯会快闪。这个是设置模式【M2设置方法同上】
②设置模式开启后指示灯会快闪，这个时候就能设置按键，手柄按什么键就会录入到M1按键上。如 按一下A键，这样A就会录入到M1上【此按键为列举,其他键位也均可录入】
③如需设置多个按键 按一下A再按B再按X再按Y，这样按M1出现顺序就是A B X Y【此按键设置为列举,其他组后顺序均可设置12个:A/B/X/Y/上下左右 LB/LT/RB/RT】
④按键按完后，再按下M1即为完成编程，此时指示灯常亮。

【背部宏清除按键】

同时按住手柄的"SELECT"+"M1"键进入编程模式，此时指示灯快闪，在此时不要键入任何键值，再次按下"M1"键，即可清除M1键之前设置的键值。

灯光切换功能：



按下 "START" + "L3" 切换灯光颜色：
灯光颜色：红色、黄色、蓝色、绿色、紫色
(呼吸自动循环变色)。

摇杆高低调节：





【摇杆升高】
摇杆顺逆时针旋转

【摇杆调低】
摇杆顺逆时针旋转

摇杆力度调节：





【摇杆力度调松】
阻尼环逆时针旋转

【摇杆力度调紧】
阻尼环顺时针旋转

中控屏对应按钮操作：



中控屏可调节功能：
摇杆、体感、振机、马达震动力度、语言选择


手柄充电/休眠/唤醒功能：


1、手柄充电功能：
绿电时，指示灯快闪提示；
充电时，指示灯慢闪提示；
充满时，手柄关机；

2、手柄休眠/唤醒/关机功能：
A、手柄在5分钟内没有任何按键操作时自动关机休眠；
B、当需要重新使用时需按HOME键唤醒即可回连；
C、在开机状态下，长按HOME键 8 秒，产品关机，所有 LED 指示灯熄灭。

G8 Wireless Controller Manual

Schematic diagram of functional buttons:

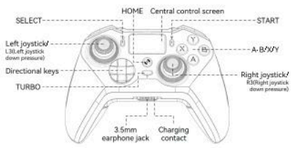

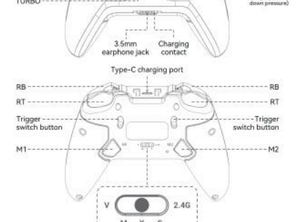

Mode switch key
V3 mode | MFi mode | X-input mode | Switch mode | 2.4G mode

Applicable instructions:

1. This product adopts ergonomic design, providing a comfortable hand feel.
2. Using Bluetooth 5.3 EDR/BLE connection, the controller is connected to various hosts such as mobile phones through Bluetooth.
3. Support ShootingPlus APP, which can be downloaded from various mobile app markets.
4. Supports Android and HarmonyOS HID standard modes, and can play various arcade games that support HID standard modes.
5. Supports Android 6.0 and above systems (i.e. ShootingPlus Android mode).
6. Supports iOS 13.0 and above MFi games, which can be downloaded from the ShanWan MFi app.
7. Support playing X-input games on Android/Apple/HarmonyOS phones.
8. Equipped with six axis motion sensing function, supporting strong motion sensing opening

★ Due to system issues with the mobile phone, some phones may not support this device

★ Due to uncontrollable factors such as official game platform software upgrades or source code changes, some games may not be able to connect and operate with this product. Our company is not responsible for any consequences. Our company reserves the right of final interpretation regarding this matter.

Product characteristic parameters:

1. Working voltage: DC3.7V
2. Working current: approximately 10mA
3. Continuous usage time:>20H
4. Sleep current:<5uA
5. Charging voltage/current: DC5V/500mA
6. Bluetooth transmission distance:<=8M
7. Battery capacity: 1000mAh
8. Standby time: 60 days of fully charged storage


Product Instructions:

X-input mode:

1. Pull the mode button to the "X" position, press and hold the "HOME" button to turn on the device, and the indicator light (cyan) will flash rapidly.
2. Use the device to find and add a Bluetooth device, click search, find the "Xbox Wireless Controller" device name, and select connect. After successful connection, the indicator light on the handle remains on (cyan).
3. When reconnecting, short press the "HOME" button to automatically connect.

* This mode is suitable for streaming on Android/iOS/HarmonyOS Xbox console series and PC consoles, as well as playing original games on mobile phones

2.4G mode:





Computer receiver
[insert computer]
[Optional]

1. Pull the mode button to the "2.4G" position, long press the "HOME" button to turn on the device, and the indicator light (cyan) will flash rapidly.
2. After the receiver is successfully connected to the device, the indicator light on the handle remains on (cyan).
3. When reconnecting, short press the "HOME" button to automatically connect.

* This mode is suitable for PC and Android devices

Switch mode:



1. Pull the mode button to the "S" position, press and hold the "HOME" button to turn on the device, and the indicator light (green) will flash rapidly.
2. On the SWITCH host, select Controller ->Change Grip/Order to enter the SWITCH host pairing mode interface Press L+R on the controller. After entering Switch mode pairing and successfully connecting, the controller indicator light remains on (green).
3. When reconnecting, short press the "HOME" button to automatically connect.

* This mode is suitable for Switch consoles.

MFi mode:




1. Pull the mode button to the "M" position, press and hold the "HOME" button to turn on the device, and the indicator light (purple) will flash rapidly.
2. When the device searches for the device name "DUALSHOCK 4 Wireless Controller", select Connect. After successful connection, the indicator light on the handle remains on (purple).
3. When reconnecting, short press the "HOME" button to automatically connect.

* This mode is suitable for playing native Apple/Android/HarmonyOS games, as well as streaming games on PS4/PS5

P4 connection:

1. Pull the mode key to the "M" position, plug the USB data cable into the USB interface of the PS4, and plug the Type-C interface on the other end into the G8 wired connection interface.
2. Press and hold the "HOME" button to turn on the device, and the indicator light (blue) will flash rapidly.
3. After successful connection, the indicator light on the controller stays on (blue), and once it stays on, unplug the data cable to operate wirelessly.
4. When reconnecting to PS4, press the "HOME" button briefly to automatically connect.

V3 mode:




1. Pull the mode button to the "V" position, press and hold the "HOME" button to turn on the device, and the indicator light (red) will flash rapidly.
2. Turn on your phone's Bluetooth, find the Bluetooth name "G8", select the connection, and after successful connection, the controller indicator light will remain on (red).

3. When reconnecting, short press the "HOME" button to automatically connect.

* This mode only supports games that require mapping on Android and HarmonyOS systems, such as King of Glory and PUBG!
* When the handle is pulled to the V3 position, hold down X first and then press HOME to turn on the device, which is in HID mode. And it must be connected in this way every time.

Android/HarmonyOS key mapping function:

Follow the official account "ShootingPlus" and check the default operating instructions in the official account. If you need to set the mapping keys, please download and install the "ShootingPlusV3" APP, map the keys and adjust the key positions in the APP.
The Shooting Plus V3 App can be downloaded from various mobile app markets for Android and HarmonyOS systems.



Wired mode:

1. Supports wired connections for Android HID, Switch, MFi, and Xinput
2. The usage method is to unplug to the desired mode, and then connect the device and handle with a cable with data transmission function!

TURBO settings:



Press "A" and then "T" to press the "A" key Turbo for continuous firing

Press "A" for the second time and then press "T", the "A" key will automatically send consecutive messages

Press "A" for the third time and then press "T" to turn off the continuous transmission (restore the original state) with the "A" key

When the "A" key is in AUTO automatic continuous firing mode, hold down the "TURBO+left joystick up and down" button to set the speed of automatic continuous firing, which is 15 strokes per second, 25 strokes per second, and 8 strokes per second. (Note: The method for setting other function keys is the same as above)

Axis calibration function:



Place the controller flat on the desktop, while holding down the 【 START+HOME 】 button, wait for the indicator light to stay on, then release it. After calibration is complete, the indicator light will turn off.

Strong physical sensation:

1. Press and hold the "T" key for eight seconds, and if the motor vibrates, switch to simulating the right joystick.
2. When the six axis has been switched to the right joystick, lightly press "T" to enter the gyroscope half on state. The main usage scenario is to assist shooting and aiming when pressing L2 to turn on the mirror during FPS games.
3. Press and hold the "T" key again for eight seconds without releasing it. If the motor vibrates, switch to simulating the left joystick.
4. Press and hold the "T" key again for eight seconds without releasing it. If the motor vibrates, cancel.

Macro programming:






【Back macro extension settings】

① Press and hold the "SELECT" button on the controller, then press "M1". After 1 second, the indicator light will flash rapidly. This is the setting mode 【 M2 setting method as above 】
② After the setting mode is turned on, the indicator light will flash rapidly. At this time, the buttons can be set, and the key pressed on the controller will be recorded on the M1 button. For example, press the A key once, and A will be entered into M1. [This key is for listing: other keys can also be entered]
③ To set multiple buttons: press A once, then press B, then press X, and then press Y, so that the order of M1's movis is A, B, X, and Y. [This button is set to list: 12 ABXY-up, down, left, and right LB-LT/RB/RT can be set for other move orders]
④ After pressing the button, press M1 again to complete the programming, and the indicator light will remain on.

【Back macro clear button】

Simultaneously press and hold the "SELECT" and "M1" keys on the controller to enter programming mode. The indicator light will flash. Do not enter any key values at this time. Press the "M1" key again to eliminate the key values set before the M1 key.

Light switching function:



Press "START"+"L3" to switch light colors:
Light colors: red, yellow, blue, green, purple (Automatic respiratory cycle color change).

Joystick height adjustment:





【Raise the joystick】
Rotate the joystick cap counterclockwise

【Lower the joystick】
Rotate the joystick cap clockwise

Adjustment of joystick force:





【Loosen the joystick force】
Damping ring rotates counterclockwise

【Tighten the joystick force】
Damping ring rotates clockwise

Central control screen operation:



Adjustable functions of the central control screen:
Joystick, motion sensing, trigger, motor vibration intensity, language selection

Controller charging/sleep/wake-up function:

1、Controller charging function:
When the power is low, the indicator light flashes to prompt;
When charging, the indicator light flashes slowly to prompt;
When fully charged, the controller shuts down;

2、Controller sleep/wake-up/shutdown function:
A、The controller automatically shuts down and enters sleep mode within 5 minutes without any button operation;
B、When it needs to be reused, press the HOME key to wake up and reconnect;
C、In the power on state, long press the HOME button for 8 seconds to turn off the product and all LED indicator lights will turn off.

G8無線コントローラ説明書

機能ボタンの概略図：



モード切替キー
V3モード | MFiモード | X-inputモード | Switchモード | 2.4Gモード

適用説明：

1. 本製品は人体工学設計を採用し、手触りが快適である。
2. Bluetooth 5.3 EDR/BLE接続を採用し、ハンドルはBluetoothを通じて携帯電話などの各ホストと接続する。
3. ShootingPlusアプリに対応しており、アプリは各携帯アプリ市場を通じてダウンロードできる。
4. アンドロイドと鴻蒙HID標準モードをサポートし、HID標準モードをサポートする各種ゲームセンターゲームをプレイすることができる。
5. Android 6.0以上のシステム（ShootingPlus Android モード）をサポートする。
6. iOS 13.0以上のシステムMFiゲームをサポートし、MFiゲームはShanWan MFi appでダウンロードできる。
7. アンドロイド/アップル/鴻蒙携帯電話のX-inputゲームに対応している。
8. 6軸体感機能を有し、支持体感が強い

★ 携帯電話システムの問題で、個別の携帯電話はこの機器に対応していない可能性があります

★ 公式ゲームプラットフォームのソフトウェアアップグレードやソースコード変更などの不可抗力原因により、一部のゲームが本製品と接続操作できなくなり、当社はいかなる責任も負いません。これに対して当社は最終的な解釈権を留保している。

製品特性パラメータ：

1、動作電圧：DC 3.7 V
2、動作電流：約10 mA
3、持続使用時間：>20 H
4、休眠電流：<5 uA
5、充電電圧/電流：DC 5 V 500 mA
6、ブルートゥース伝送距離：<=8 M
7、電池容量：1000 mAh
8、待機時間：満電60日間放置

製品使用説明：

X-inputモード：

1、モードキーを「X」レンジに引き抜き、「HOMEキー」を長押しして電源を入れ、LED【シアン】が点滅した。
2、デバイスを使用してBluetoothデバイスを追加し、検索をクリックして「Xbox Wireless Controller」デバイス名を見つけたら、接続を選択します。接続に成功すると、ハンドルLEDは常に【シアン】に点灯します。
3、再度接続する場合は、「ホームキー」を短く押すと、自動的に接続されます。

* このモードは、アンドロイド/iOS/鴻蒙/XboxホストシリーズとPCホストのストリーミング、携帯電話の原型ゲームに適しています

2.4 Gモード：

パソコン受信機
【パソコンに挿す】
【オプション】

1、モードキーを「2.4 G」レンジに引き抜き、「ホームキー」を長押しして電源を入れ、LED【シアン】が点滅した。
2、受信機はデバイスに差し込み、接続が成功すると、ハンドルLEDは常に【シアン】に点灯します。
3、再度接続する場合は、「ホームキー」を短く押すと、自動的に接続されます。

* このモードはPCとアンドロイドシステムデバイスに適しています

Switchモード：

1、モードキーを「S」シフトに引き抜き、「HOMEキー」を長押しして電源を入れ、LED【グリーン】が点滅した。
2、SWITCHホストでは、ハンドルControllers->グリップ/シーケンス変更ChangeGripOrderを選択し、SWITCHホストペアリングモードインタフェースPress L+R on the controllerに進みます。Switchモードのペアリングに入り、接続に成功すると、ハンドルのLEDが常に点灯します【グリーン】。
3、再度接続する場合は、「ホームキー」を短く押すと、自動的に接続されます。

* このモードはSwitch本体に適用されます。

MFiモード：

1、モードキーを「M」レンジに引き抜き、「HOMEキー」を長押しして電源を入れ、LED【パープル】が点滅した。
2、デバイスが「DUALSHOCK 4 Wireless Controller」デバイス名を検索した場合、接続を選択します。接続に成功すると、ハンドルLEDは常に点灯します【パープル】。
3、再度接続する場合は、「ホームキー」を短く押すと、自動的に接続されます。

* このモードは、アップル/アンドロイド/鴻蒙原生ゲーム、PS 4/PS 5ストリーミングゲームに適しています

P4接続：

1、モードキーを「M」レンジに引き抜き、USBデータケーブルをPS 4のUSBインタフェースに、他端のType-Cインタフェース&G 8有線接続インタフェースに差し込む
2、「ホームキー」を長押しして電源を入れ、LED【青】が点滅します。
3、接続が成功すると、ハンドルのLEDは常に【青】に点灯し、常に点灯したらデータ線を抜くと無線操作ができます。
4、PS 4に再び接続する場合は、「ホームキー」を短く押すと、自動的に接続されます

V 3モード：

1、モードキーを「V」レンジまで引き抜いて、「HOMEキー」を長押しして起動して、ランプ【あか】がフラッシュします。
2、携帯電話のBluetoothをオンにして、Bluetoothの名前「G 8」を見つけて、接続を選択して、接続に成功したら、【あか】を点灯します。
3、再度接続する場合は、「ホームキー」を短く押すと、自動的に接続されます。

* このモードはアンドロイド、鴻蒙システム対王者、鶏を食べるなどマッピングが必要なゲームのみをサポートしています！
* ハンドルをV 3位置に引き抜くときはXを押したままホームを押して電源を入れ、HIDモードにします。そして毎回このように接続しなければなりません。

Android/鴻蒙キーマッピング機能：

公衆番号「ShootingPlus」に注目し、公衆番号内のデフォルト操作説明を見て、マッピングキーを設定する必要がある場合は、「ShootingPlusV 3」アプリをダウンロードしてインストールし、アプリ内でキーマッピングとキー調整を行ってください。
ShootingPlusV 3 App、アンドロイドと鴻蒙システムは各携帯電話アプリ市場にダウンロードできる。

有線モード：

1、Android HID、Switch、MFi、Xinput有線接続に対応
2、使用方法は必要なモードに抜き、データ転送機能のある線でデバイスとハンドルを接続すればOK!

TURBO設定：

「A」を押して「T」を押すと、「A」キーTurbo連発

2回目に「A」を押して「T」を押すと、「A」キーが自動的に連続します

3回目に「A」を押して「T」を押すと、「A」キーで連続を閉じる（元に戻す）

「A」キーがAUTOで自動的に連続する場合、「TURBO+左ロッカー上下」を押しながら自動連続の速度を設定します。それぞれ1秒15、1秒25、1秒8です。（注：その他のファンクションキーの設定方法は同上）

軸較正機能：

ハンドルをデスクトップに平らに置き、同時に【START+HOME】ボタンを押し、ランプが常に点灯したら手を放し、キャリブレーションが完了したらランプが消えるのを待つ。

体感開：

1、「T」ボタンを8秒間押して放さず、モーターが振動すると、アナログ右インイングレバーが切り替わります。
2、六軸已が右スイングレバーに切り替わった時、続く「T」を押すとジャイロ半開状態になり、主な使用シーンは補助FPSゲーム時に2ミラーを押した時の射撃照準である。
3、再び「T」ボタンを8秒間押して放さず、モーターが振動すると、アナログ左スイングレバーを切り替えます。
4、再び「T」ボタンを8秒間押して放さず、モーターが振動したらキャンセルします。

マクロプログラミング：

【バックグラウンドマクロ拡張設定】

①ハンドルの「SELECT」を押したまま設置せず、「M 1」を押すと、1秒後にランプが点滅します。これは設置モードです【M 2設置方法は同上】
②設定モードがオンになるとランプが点滅し、その時にボタンを設定でき、ハンドルがどのボタンを押すとM 1ボタンに入力されます。例：Aキーを押すと、A以M 1に入力されます【このキーは列挙：他のキーも入力できます】
③複数のキーを設定する必要がある場合：Aを押してからBを押してXを押してからYを押して、M 1を押すとA B X Yが出る【このキーの設定は列挙：その他の鉄頭はすべて12個のABXY 上下左右/L B/LT/R B/RTを設定することができる】
④キーを押し終わったら、M 1を押すとプログラミングが完了し、LEDが常に点灯します。

【バックマクロクリアボタン】

同時にハンドルの「SELECT」＋「M 1」ボタンを押してプログラングモードに入ると、ランプがフラッシュし、この時はいかなる入力値も入力せず、再び「M 1」ボタンを押すと、M 1ボタンの前に設定された入力値を削除することができる。

ライト切り替え機能：

「START」＋「L 3」を押してライトの色を切り替えます。
ライトの色：あか、きいろ、ブルー、グリーン、パープル
（呼吸自動循環変色）。

ロッカーの高さ調整：

【ロッカーの上昇】
ロッカキャップが反時計回りに回転する

【ロッカレバーの調整】
ロッカキャップが時計回りに回転する

ロッカーの力加減：

【ロッカーの力加減の緩み】
ダンピングリングが反時計回りに回転する

【ロッカーの力加減】
ダンピングリングが時計回りに回転する

中画面対応ボタン操作：

中画面調整機能：
スイングレバー、体感、トリガ、モータ振動力、言語選択

ハンドルの充電/スリープ/ウェイクアップ機能：

1、ハンドル充電機能：
低電力時には、LEDが点滅します。
充電中、LEDがゆっくり点滅することを示すメッセージ、
満タンになると、ハンドルがオフになります。

2、ハンドルのスリープ/起動/シャットダウン機能：
A、ハンドルは5分以内にボタン操作がない場合、自動的に電源を切って休眠する。
B、再使用が必要な場合はホームキーを押して起動すると再接続できます。
C、電源を入れた状態で、ホームボタンを8秒間長く押して、製品は電源を切り、すべてのLEDランプは消灯した。