
USER MANUAL

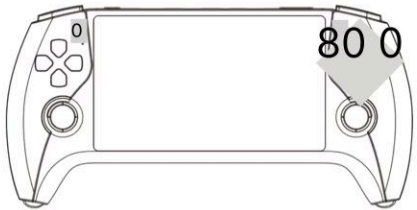

SF3500

GAME PLAYER

PLEASE READ THROUGH THIS INSTRUCTION MANUAL COMPLETELY BEFORE USE.AND KEEP IT WELLFORFUTUREASSISTANCE WHENEVERREQUIRED

IMPORTANT NOTES: THIS PRODUCT IS A KIND OF GAME EMULATOR WHICH IS CONSIST OFTHOUSANDS OF DIFFERENT TYPES OF GAMES BASEDON DIFFERENT SYSTEM PLATFORMS.DUE TO MANY FACTORS, IT CANNOT BE ASSURED THAT EVERY GAME CAN BE PLAYED,FUNCTION,WORKOR RUN PERFECTLY.INCASE THAT A CERTAIN GAME CANNOT BE PLAYEDOR RUNOR HAVING BUG,WE TAKE IT GRANTED AS NORMAL AND WILLGIVEUP TOPLAY THATGAME.

<1> TECHNICAL SPECIFICATIONS

CPU	DUAL CORE, 1.2G
DDR3	2G
SCREEN	5.0" IPS LCD OCA SCREEN
RECHARGEABLE LITHIUM BATTERY	3000 mAh
TV OUTPUT	Full HD
BATTERY LIFE	5~7HOURS
POWER SUPPLY OF CONSOLE	5V/2A
CHARGER (when available)	INPUT: 100~240V, 50/60 Hz
	OUTPUT: 5V/2A

<2> PACKAGE CONTENT



1 X CONSOLE



1 X MICRO-SD(TF) CARD



1 XTYPE-C USB CHARGING CABLE



1 X MANUAL

<3> NAME & FUNCTIONS



1. POWER ON/OFF
2. TF CARD SLOT
3. FHD OUTPUT
4. AUX PORT /EARPHONE JACK
5. DC/OTG PORT
6. VOLUME -/+
7. L1 ACTION BUTTON
8. L2 ACTION BUTTON
9. R1 ACTION BUTTON
10. R2 ACTION BUTTON
11. SELECT BUTTON
12. DIRECTIONAL BUTTONS
13. DIRECTIONAL THUMBSTICK (D-PAD)
14. LIGHT INDICATOR
15. START BUTTON
16. ACTION BUTTONS
17. ACTION THUMBSTICK
18. SPEAKER

Noted

- When the product is working wiTHouT charging,the light indicates as follows:
  Red: 0%~24%
  Purple: 25%~74%
  White: 75%~100%

- When the product is working DURiNG charging,the light indicates as follows:
  Flashing Red: 0%~24%
  Alternate Flashing Between Red & Purple: 25%~49%
  Purple: 50%~74%
  Alternate Flashing Between Purple & White: 75%~99%
  Constant White: 100%

ADDITIONAL FUNCTION DESCRIPTION

- ACTION BUTTONS (A B X Y): Each button's function may possibly vary depending on each game's programming design.
- BUTTON"A": Press to"ENTER/CONFIRM/START".
- BUTTON"B": Press to "RETURN/BACKWARDS".
- BUTTON"X": In game list window,press to add the selected game to "FAVORITE" folder and press again to remove it.
- BUTTON"Y": Enter the game list window, press to enter GAMESECH window.Then move to the desired letter on the keypad and press button"A" to confirm input and press button"Y" or"B" to delete input.
- L1 / R1: press to turn screen page left and right.
- COMBO BUTTONS: press"SELECT+START" simultaneously to realize functions such as: EXIT,RESUME,SAVE and LOAD game progress.
- TYPE-C USB Port: besides of battery charging,there is OTG function such as EMERGENCY RECHARGE for devices with 5V power supply like mobile phone and function of connecting extra joystick control (wired or wireless).
- OTHER FUNcTioNS: support movie,music,photos viewing,E-book,multi UI languages.... ..

<4> WARNINGS & PRECAUTIONS

1. Please do NOT disassemble or try to fix the product and its related parts & components at your own discretion.
- Avoid liquid splash over the product and its related parts & components.
- 3.Please do NoT store the product in an area of wetness,-dust and dirt.
- 4.Please power off when the product is not in use.
- 5.Always use the product in a well-ventilated and well-lit area ONLY.
- 6.Please do NoT use the product for a long period continuously.It's recommended to take a 10-15-minute rest every hour of playing.
7. 7.When feeling drowsy,weak,weary or tired,please IMMEDiATELY stop using the product and take a rest.Or please consult the doctor when your eyes are uncomfortable.
- 8.Keep the product and all other accessories out of reach of children under 6 years to avoid any accident.
- 9.It's recommended to use the product under supervision or watch of adults.
- Recommended age of use: 6 years up.

ITEM NO.SF3500
MADE EINCHINA



GAME MACHINE PRODUCT WARRANTY CARD

Model		Date of Production	
User Name		Serial No.	
User Add	Province / City	ZIP Code	
Purchase Goods	Province /City/Commodity	Purchase Date	

Detaled Fault

NOTE: PLEASE FILL OUT THE WORKING CONDITION OF THE MACHINE WHEN THE FAULT PHONEMENON, THE FAILURE TIME.THE ENVIRONMENT AND THE FAULT OCCUR

Maintenance Record Date	Symptoms Processing Method	Maintenance Signature of Personnel